



FRONT SEATBACK HEATER

INSPECTION

1. INSPECT FRONT SEATBACK HEATER ASSEMBLY LH

- (a) Measure the resistance of the seatback heater.

Standard resistance

Tester Connection	Condition	Specified Condition
1 - 2	Seatback heater temperature 20°C (68°F)	Approx. 6.21 Ω

If the result is not as specified, replace the seatback heater assembly.

2. INSPECT FRONT SEATBACK HEATER ASSEMBLY RH

HINT:

Use the same procedures described for the LH side.